

Product Specifications:

Material: Silicone+metal Battery: 701225 / 130mAh Battery Voltage: 3.7V Number of vibration: 3 speeds +7 vibration modes User time: 1 hour Sound Level: ≤40db

CHARGING INSTRUCTIONS
This vibrator arrives with a partial charge, so it is recommended to fully charge before use.
To charge, connect the USB plug into the USB port of your computer or other output and the DC charger into input at the back of the

toy's base.
Initial and subsequent charges will take about 35

Initial and subsequent charges will take about 35 minutes to complete.

The indicator light will flash while device is charging and turn off when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 1 hour of play time at the highest level of vibration and about 1.2 hours at the lowest level.

This toy operates at a sound level of between

This toy operates at a sound level of between 40db with a rechargeable 130mAh lithium battery at 3.7V.

INSTRUCTIONS FOR USE
This toy has a convenient 1-button control at the side of its base.

To turn toy on, press the Power Button for at least 3 seconds. The lights will turn on and toy will begin vibrating at its first lowest

frequency. Once the toy is on, press the Power Button again, a single time for each new speed or function for a total of 10. To turn toy off, press Power Button for at least 3 seconds.

INSERT CHARGER

USB RECHARGEABLE