

**Product Specifications:** 

Material: ABS & Silicone Battery: Polymer lithium Voltage: 5.0V Number of Vibrations: 10 User time: 60 - 70 Minutes Sound Level: <55dp

## **CHARGING INSTRUCTIONS**

This toy arrives with a 70% charge, so it's not necessary to charge before first use. But if you do, initial charge will take about 30 minutes. Subsequent charges will take

about 90 minutes. Charge lasts for about 70 minutes at the lowest speed and about 60 minutes at the highest speed.

To charge, connect the USB plug into a power source and the DC charger into the charging port at the side of the toy's base. The indicator light will flash while device is charging and stay constant when toy is fully charged. This toy operates at a sound level of less than 55db with a rechargeable lithium battery.

INSERT CHARGER HERE

USB RECHARGEABLE

## INSTRUCTIONS FOR USE

- for 2 seconds to turn toy on. The button will light up and toy will begin vibrating at its first lowest frequency.

  2. Press button again for 0.5 seconds at a time to cycle through 10 speeds and patterns.
  - 3. To turn toy off, press button for at 2 seconds.