

<http://www.genderx.com/>

**GENDER** X



**Product Specifications:**

Material: ABS+Silicone  
Battery: 701230-230mAh  
Voltage: 3.7V  
Number of Vibrations:  
9000rpm±10%rpm  
User time: 70 Minutes  
Sound Level: 50 Dbs

**CHARGING INSTRUCTIONS**

This toy arrives with a high partial charge of about 80%. It is not necessary to charge before first use.

To charge, connect the USB plug into the USB port of your computer or other output and the DC charger into the port at the side of the base of the toy.

Initial charge will take about 60 minutes and subsequent charges will take about 90 minutes to complete.

The indicator light will flash while device is charging and stay constant when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 90 minutes of play time on the lowest level of vibration and about 55 minutes on the highest level.

This toy operates at a sound level of less than 50db with a rechargeable 230MAh lithium battery at 3.7V.



**INSTRUCTIONS FOR USE**

This toy has a convenient 1-button control at its base.

To turn toy on, press the button for at least 1.5 seconds. The light will turn on and toy will begin vibrating at its first lowest frequency.

Once the toy is on, press the button again, a single time for each new speed or function for a total of 10.

To turn toy off, press button for at least 1.5 seconds.

USB RECHARGEABLE