

**Product Specifications:** 

Material: Silicone & ABS Battery: Li-ion Battery YL 602030 3.7V 300mAh 1.11Wh 6.0g Voltage: 3.7V Number of Vibrations: 6 User time: 65 Minutes Sound Level: ≤60DB

**CHARGING INSTRUCTIONS** 

It is recommended to use up the initial charge before recharging. Complete this cycle 3 times for optimal battery longevity. To charge, connect the USB plug into a power source

and the DC charger onto the magnetic pins at the base of the toy's handle. The indicator light will flash while device is charging and stay constant when toy is fully charged. Charges take about 70 minutes to complete. Battery charge lasts for about an hour of play time with average use. This toy operates at a sound level of less than 60db with a 300mAh lithium battery at a voltage of 3.7V.

## INSTRUCTIONS FOR USE

1. Press the button located on the toy's handle below the wand head for 2 seconds to turn toy on. The button will light up and toy will begin in standby.
2. Press button again for 0.5 seconds

ATTACH USB
CHARGER
TO PRONGS

at a time to cycle through 6
vibration modes and standby.
3. To turn toy off, press button
for at least 2 seconds.

**USB RECHARGEABLE**