

http://www.selopa.com/

## **Product Specifications:**

Material: Silicone & ABS Plastic Battery: 951360 600mAH Voltage: 3.7V

Number of Vibrations: 10 User time: 150 - 180 Minutes Sound Level: ≤60dB

## **CHARGING INSTRUCTIONS**

It is recommended to charge this toy before first use. Initial charge completes in about 1 hour, subsequent charges in 2 hours. Connect the USB cable to a power source at one end

and connect the other end onto the magnetic charging pins at the toy's base. An indicator light flashes while charging, then becomes solid when charge is complete.

Battery charge lasts for about 180 minutes on the lowest frequency, and about 150 minutes on the highest frequency. Sound level reaches 60db and toy operates at 3.7V with a 600mAh

battery.



1. Press the button at the toy's base for 2 seconds to turn toy on. The button will light up and toy will begin vibrating at its lowest frequency.

2. Press button again for 0.5 seconds at a time to cycle through 3 speeds and 7 patterns.

3. To turn toy off, press button for at least 2 seconds. Vibration will cease and light will turn off.

**USB RECHARGEABLE** 

