

Product Specifications:

Material: Silicone & ABS Battery: Li-ion

Voltage: 3.7V

Number of Vibrations: 10 User time: 50 - 70 Minutes

Sound Level: ≤40db

CHARGING INSTRUCTIONS

This vibrator arrives fully charged. To charge, connect the USB cable to a power source at one end and plug the other end into the port at the side of the toy's handle base. An indicator light flashes when the toy is charging and turns solid when it's charged. The initial charge will take about 90 minutes,

subsequent charges about 30 minutes. Battery charge lasts for about 70 minutes on the lowest frequency, and about 50 minutes on the

highest frequency. This toy operates at a sound level of less than 40db at 3.7V.

INSTRUCTIONS FOR USE

1. The toy's 1-button control panel is located at the bottom of the toy's base.

2. Press the button for 1.5

seconds to turn on the toy. The light will turn on and toy will begin vibrating at its lowest

speed.
3. Press the button again more quickly to cycle through 10 speeds and patterns.
4. Press the button for 1.5 seconds to turn toy off. Light will turn off and motor will

USB RECHARGEABLE

INSERT CHARGER HERE