

Product Specifications:

Material: Silicone Battery: Li-ion Voltage: 3.7V Number of Vibrations: 7

User time: 55 - 100 Minutes

Sound Level: <40db

CHARGING INSTRUCTIONS

CHARGING INSTRUCTIONS
This vibrator arrives fully charged. To charge, connect the USB cable to a power source at one end and plug the other end into the port at the base of the toy's handle. An indicator light flashes when the toy is charging and turns solid when it's charged. The initial charge will take about 90 minutes, subsequent charges about 30 minutes.

Buttery charge lasts for about 100 Battery charge lasts for about 100 minutes on the lowest frequency, and about 55 minutes on the highest frequency. This toy operates at a sound level of less than 40db at 3.7V.

INSTRUCTIONS FOR USE
1. The toy's 2-button control panel is located at the front of the base of the

toy.
2. Press the power button for 3 seconds to turn on the toy. The light will turn on and toy will begin vibrating at its lowest speed in both motors (motors operate together).
3. Press the top button more quickly to cycle up through 7 speeds and patterns.

4. Press the bottom button more quickly to cycle down through 7 speeds and patterns.

CHARGER HERE

5. Press the power button for seconds to turn toy off. Light will turn off and motors

will cease. USB RECHARGEABLE