

Product Specifications:

Material: Silicone + ABS Battery: One polymer battery

Voltage: 3.7V

Number of Vibrations: 10 User time: 50-60 minutes Sound Level: Under 50 Db

INSERT Charger Here

CHARGING INSTRUCTIONS
This vibrator arrives with partial charge of about 70%, so it is recommended to fully charge it before use.
Connect the USB plug into the USB port of your computer or other output and the other end of the DC charger into toy's input.
Initial charge will take about 20 minutes and subsequent charges will take about 70 minutes to complete.

The indicator light will flash while device is charging, and turn solid when toy is fully charged. There is no danger of battery damage by overcharging, but it's recommended not to overcharge for long periods of time.

Charge lasts for about 60 minutes of play time on the lowest level of vibration, and about 50 minutes on the highest level.

This toy operates at a sound level of 50 db at a voltage of 3.7V.

INSTRUCTIONS FOR USE

INSTRUCTIONS FOR USE
This toy operates with a 3-button control panel at the base of the handle of the toy.
Use the bottom Power Button to turn the toy on by pressing it for at least 3 seconds. The two lines on the button represent the two motors, one in the main shaft and one in the clitoral rabbit. The two motors engage together but their speeds can be adjusted sengrately. and one in the chloral rabbit. The two indivise grayes together, but their speeds can be adjusted separately. Once the motors are engaged, use the top Main Shaft Button to cycle through 10 different speeds and functions in the main shaft motor.

Use the middle Clitoral Shaft Button to cycle through

10 different speeds and functions in the clitoral

To turn toy off, press bottom Power Button for at least 3 seconds.

USB RECHARGEABLE